



Recommended K51 & K56 Oil Level

Normally the model K51 units do not require any servicing for the life of the tractor. However, if there is a desire to check or add oil, it may be necessary to remove the transaxle from the tractor in order to access the large, black cap located under the pulley & fan (on drive shaft).

After placing the transaxle on a level surface remove the fan & pulley and pry open the black sealing cap (pointed out in attached doc). It is best to also remove the filter and the spring (located underneath the sealing cap) so the oil will flow in and out more sufficiently. Also, when pouring in the oil you can move the bypass lever back and forth in order for the oil to flow in. Oil level should be maintained at 22~35 mm (7/8"~1 3/8") below the lip of (black cap) port, when oil temperature is at room temperature (20C or 68 F). Remember to re-install the filter, spring, and the sealing cap once you have filled the unit back up.

The K51 & K56 transaxle requires ~ 2¼ liters of **TUFF TECH premium hydrostatic drive fluid** to bring oil to level as shown in the following illustrations.

For service parts or an exploded view of the K51 or the K56 models please visit our website at www.tufftorqparts.com



