





# **CALIBRATING THE COOPER8 CONTROLLER**

## Calibrating the Cooper8 Controller


1. On the Home Screen, click “Login” at the bottom, right and log into the Engineer account.

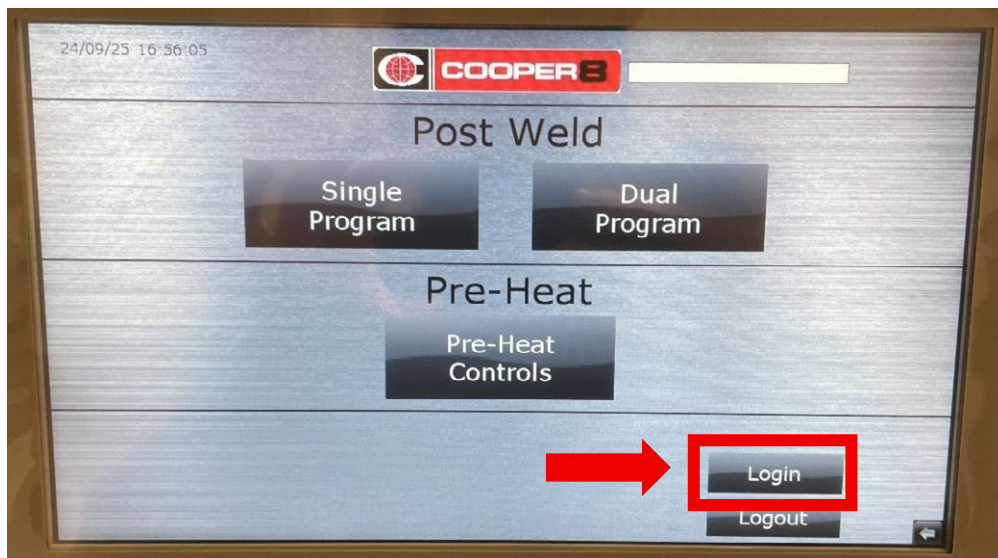

2. Select the “Settings” button at the bottom, right of the home screen.

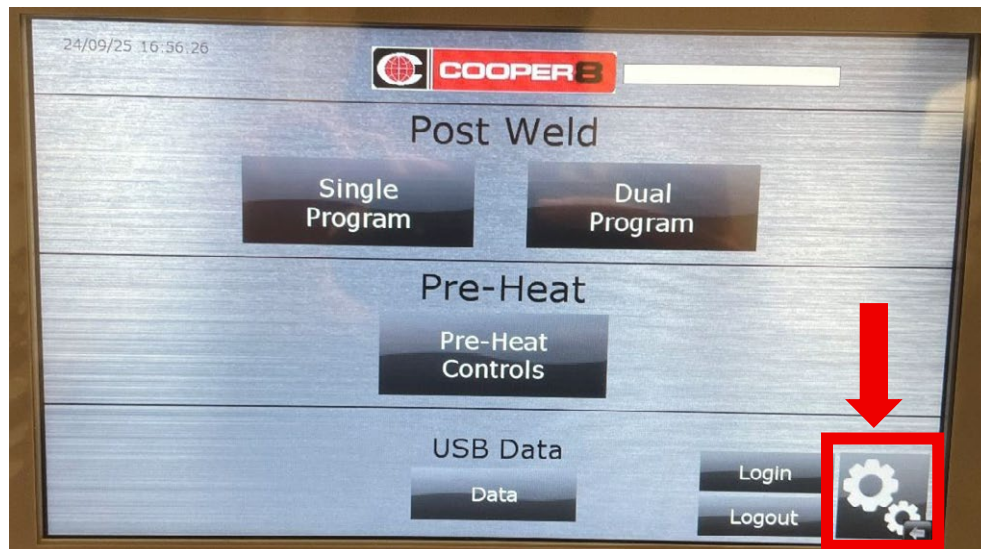

3. Select the “Calibration” button at the bottom of the screen.

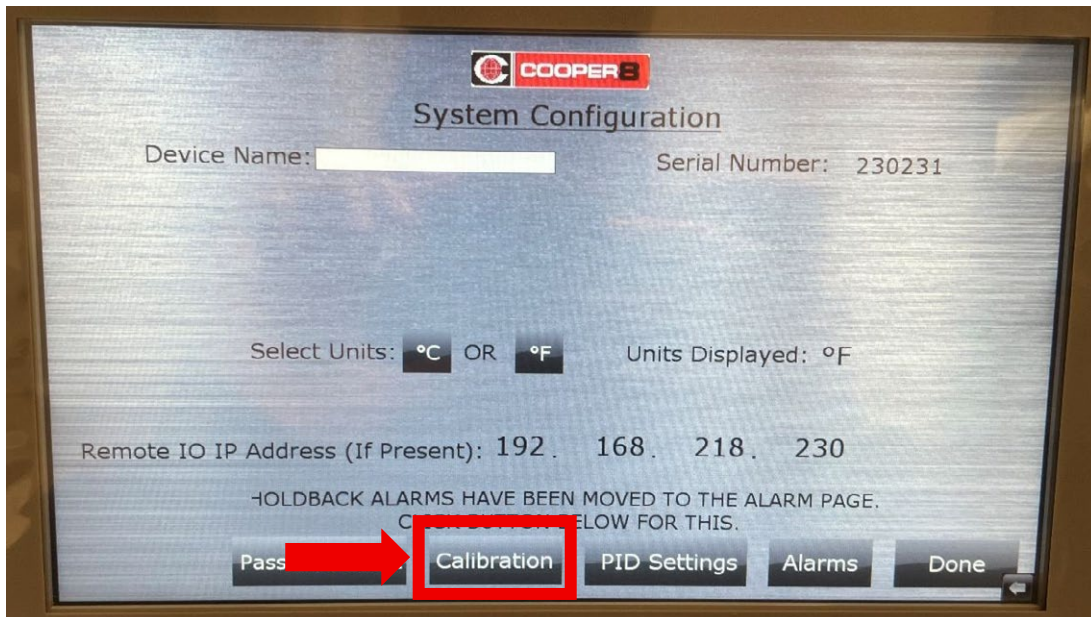

4. Here you will be able to calibrate the Cooper8.

The **Zero** is the offset value, this is the value you can adjust to calibrate the controller.

The **Span** works best when set to 1.001.

The **Filter** should always be set at 0.5.

