




CALIBRATING THE


SIDEKICK

Calibrating the SideKick


1. On the Home Screen, click “Login” at the bottom, right and log into the Engineer account.

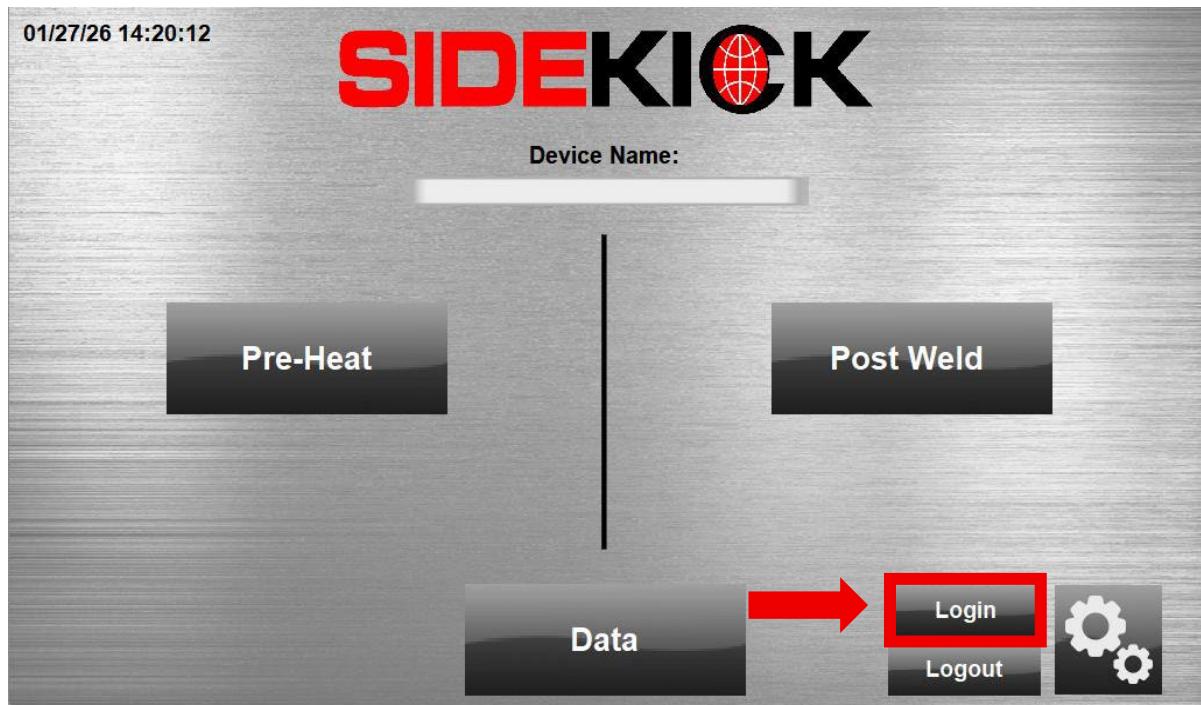

2. Once logged in, select the “Settings” button at the bottom, right of the home screen.

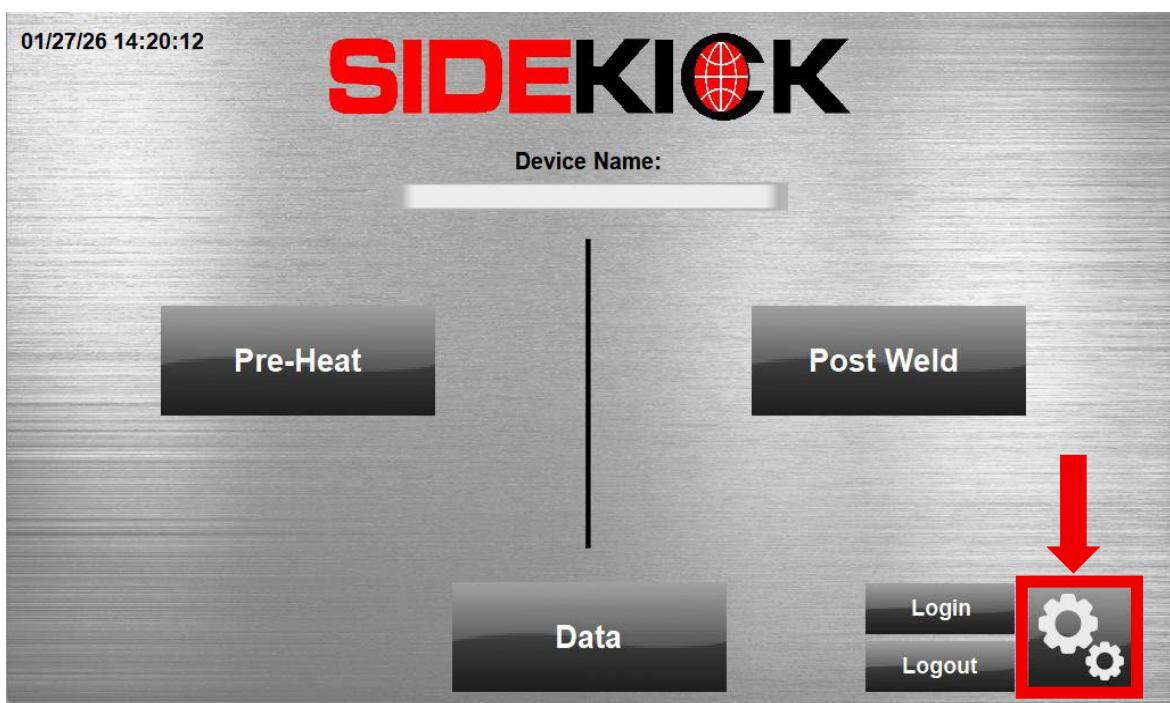

3. Select the “Calibration” button at the bottom of the screen.

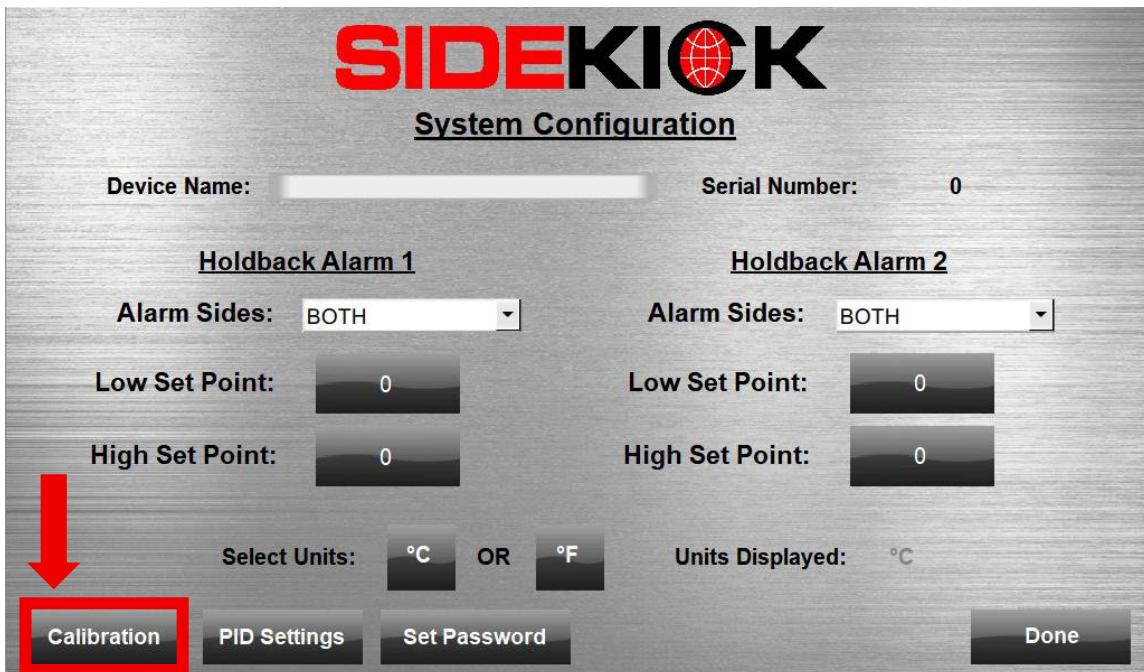

4. Here you will be able to calibrate the SideKick.

The **Zero** is the offset value, this is the value you can adjust to calibrate the controller.

The **Span** works best when set to 1.001.

The **Filter** should always be set at 0.5.

